

TECHNICAL TIPS

10 HEADREST ADJUSTMENT

To adjust the headrest height (upward), loosen the knob behind the shoulder rest, slide the rod upward, and retighten the knob (**fig. 10**). To lower the height of the headrest, proceed in the same way in addition to loosening the screw on the stopper ring with the Allen key.

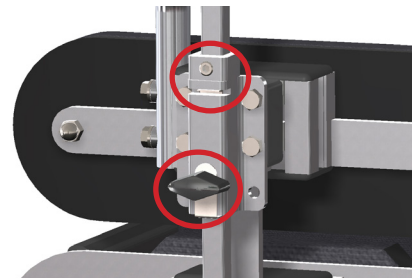


fig.10